




Audi A4 Avant - 2001 to 2008 Audi S4 Avant - 2003 to 2009

Our ref:H0266-A4/S4

Question 1 - Load cover cassette

Please note not all of the photographs are specific to your vehicle

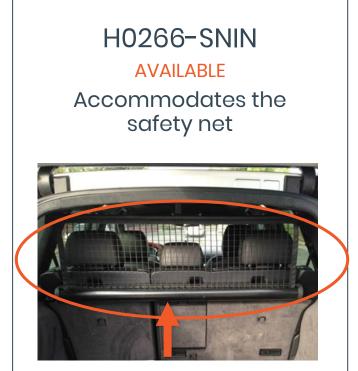

The boot liner's front panel is shallow to accommodate the safety net attaching to the back of the rear seats, if you remove this cassette the top of the seats will be left exposed.

H0266-SNOUT

AVAILABLE Does not accommodate the safety net



The boot liner's front panel is full height and attaches to the head rest posts. This panel will prevent you from attaching the safety net to the back of the rear seats.



IDENTIFICATION GUIDE

hatchbag.co.uk

Audi A4 Avant - 2001 to 2008 Audi S4 Avant - 2003 to 2009

Our ref:H0266-A4/S4

Question 2 is only relevant if you have ordered a Tailgate Cover

H0266 – TGSM AVAILABLE

Carpet depth on tailgate = 22cm



The Tailgate cover covers the carpet section only. It attaches directly to the carpet.



The Tailgate cover covers the carpet section only. It attaches directly to the carpet.