

## VOLVO XC90 - 2002on

### PACKING REQUIREMENTS

- BOOT LINER**  
4x ref 107 - "J" shaped profile plastic clip with loop fastener  
2x ref 104-large loop fastener tabs (1/2 self-adhesive),  
8x ref 099- black plastic / hook & loop fastener tabs  
Min 30 self-adhesive loop fastener pads.
- LOWER TAILGATE COVER**  
20 self-adhesive loop fastener pads
- UPPER TAILGATE COVER**  
16 self-adhesive loop fastener pads



REF: 107



REF: 104




REF: 099



### VERY IMPORTANT PREPARATION

To ensure a good bond, when using the self-adhesive hook & loop fasteners to attach the Bootliner to the plastic / metal trim (**Not** the carpet); it is most important to remove silicone film from the vehicle trim. Silicone is applied during manufacture and can also be found in many valeting products. It is **highly likely there will be a build-up of silicone**. Before applying any hook & loop fastener pads, the surface **MUST be thoroughly** cleaned using a silicone remover. (The hook & loop fasteners cannot be used once it has been in contact with silicone). We recommend "Intensive Tar Remover" made by AutoGlym and available from Halfords. Wipe off thoroughly **any residue with a separate clean dry cloth**.

**NOTE:** the adhesive takes 24hrs to reach full adhesion, do not disturb during.

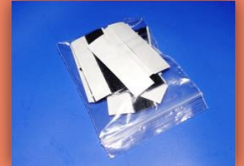

- Remove the load cover cassette.
- **PHOTO A** Trap the 3<sup>rd</sup> row seat belts as shown in the photo, so that they follow the contours of the car

### FITTING BASE



- Position base of liner snugly into place. **PHOTO B:** Note where the two hook fastener welds are on the reverse side of the liner's base panel. They will be located by the removable foam sections. **PHOTO C:** Lift out the two foam sections and attach the ref:104's so that they will align to the liner's hook fastener welds  
**PHOTO D:** When replaced the tabs will protrude out of the floor. The liner will fasten close to them.

### Tailgate end

- Slide the pocket over the plastic tailgate hinge flap.
- Again, re-position base of liner snugly into place.

### Front end

Attach the two ties to the outer headrest posts on the folded down 3<sup>rd</sup> row seats.

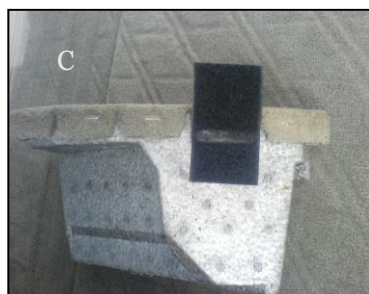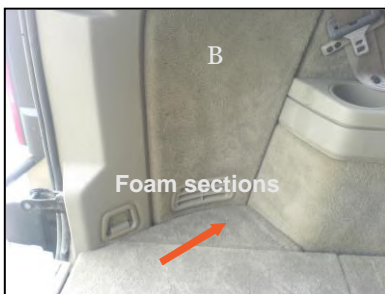



E

## FRONT PANEL

- Pass the hook & loop fastener straps around the corresponding headrest posts and fasten close.

*Note: If you have a Volvo mesh luggage net: Fit liner first, then fit the upper part of the net. Locate and mark where you need to create two slots into the liner's front panel to allow the net's lower webbing straps to pass through. The liner fabric does not fray or easily tare, as long as you do not cut through the black binding tape.*

*You will also note how you will need to keep the flaps up behind the net. SEE PHOTO J*



F

## SIDES

- Position side panels snugly into place.
- Attach the following Air Vent clips ref 099

*NOTE: The following photos; E, F & G are non-specific to your car*

**PHOTO E:** Locate the slots along the top edge of the liner sides. In line with these insert one of the separate black plastic / hook & loop fastener tabs (supplied separately) into the air vent on the side of the car. Ensure the right side of the Hook & loop fastener faces upwards when it is hanging down. See **PHOTO F**

**PHOTO G:** Pass the hook & loop fastener through the slot in the side panel and fasten back on its self.

- Attach the following "J" profile clips (ref 107) to the tailgate end of the side panels.


**PHOTO H:** Pull back the rubber seal on the door aperture to reveal the edge of the plastic panel. Slide onto this the black plastic clips ref:107 (x2 per side)

**PHOTO I:** Reposition to align with the top two hook fastener welds on the liner.

- Use the smaller self-adhesive pads to attach the rest of the side panel to the plastic moulding.



G

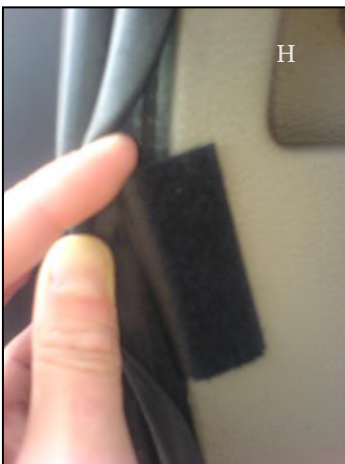

H

Replace the load cover cassette

## ADDITIONAL TAILGATE COVERS

- Use the smaller self-adhesive pads to attach both sections of the tailgate cover to the plastic / metal moulding. *You will need to lift up the plastic tailgate hinge flap for the lower door cover.*

## ADDITIONAL SEAT FLAP

- Position yourself in the 2<sup>nd</sup> row seat area to attach the seat flap.
- The flap is designed to cover the middle headrest (headrest set at its lowest height)
- The flap will pass under and through the outer headrests (leaving them exposed) and fasten onto the liner.



I



J