

SMART FOR TWO 2007 on (451 - Coupe)

Standard boot liner + Bumper Flap

Our ref: H0529

PACKING REQUIREMENTS

- 1.2 m of 30mm wide self-adhesive loop fastener.




VERY IMPORTANT PREPARATION

To ensure a good bond, when using the self-adhesive loop fastener to attach the boot liner to the plastic / metal trim (**Not** the carpet); it is most important to remove silicone film from the vehicle trim. Silicone is applied during manufacture and can also be found in many valeting products. It is **highly likely there will be a build-up of silicone**. Before applying any loop fastener pads, the surface **MUST be thoroughly** cleaned using a silicone remover. (The loop fastener cannot be used once it has been in contact with silicone). We recommend "Intensive Tar Remover" made by AutoGlym and available from Halfords. Wipe off thoroughly **any residue with a separate clean dry cloth**.

Unfortunately, we are unable to supply this product, as it cannot be transported via our postal carrier.

NOTE: the adhesive takes 24hrs to reach full adhesion – do not disturb during.

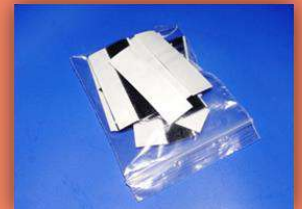

PREPARATION

Luggage Compartment Cover

- Prior to fitting you will need to remove the "Luggage Compartment Cover"
- It cannot be replaced once the boot liner is fitted



Luggage Compartment Management System

Should you wish to use this accessory notify us at point of order.

We will manufacture your boot liner with additional loop fastener sewn to the base panel. This will allow you to re-attach the slot-in sections.



FITTING

(Please note: these photos are non-specific to your vehicle)

BASE

- Carefully position the base panel snugly into place. Start at the tailgate end.
- The hook fastener sewn/welded to the reverse face of the panel will attach directly to the carpet



FRONT

- Pass each of the two elastic loops over the roof hooks



SIDES

- Use the self-adhesive loop fastener to attach the side to the plastic trim.
- We supply a minimum of 1.2m of "uncut" Loop fastener that should be matched with the hook fastener on the liner at the load area sides



BUMPER FLAP

- Fit boot liner
- Attach the Bumper Flap to the loop fastener strip that has been manufactured into the base of the boot liner.
- The Bumper Flap either folds into the vehicle OR can be detached and stored elsewhere when you close the tailgate.
- Please note that the edges of the fabric are not bound so that any mud, dirt or water can run off.

