

## Kia Optima Sportswagon – 2016 to 2019

With/No storage net on boot side  
our ref: H0738-NET/NETNO

### Packaging requirements:

- BOOT LINER
  - 2x 340 mm 30mm wide self-adhesive loop fastener
  - 2x tabs self-adhesive loop fastener
  - 2x ref.113 frequent use tabs
- TAILGATE COVER
  - 22 x tabs self-adhesive loop fastener



Rear split boot liner prepped for a seat flap, bumper flap & boot liner extension NET - With storage net on boot side



REF:113



### VERY IMPORTANT PREPARATION



To ensure the self-adhesive hook & loop fastener stick to the plastic trim, you **MUST CLEAN** the plastic from grime and **REMOVE** all the **SILICONE** applied during manufacture and valeting.

To do this please:

1. Use a silicone remover, such as 'Auto-Glym Intensive Tar Remover' and apply generously to the surface you want to adhere to.
2. Using a separate clean & dry cloth, thoroughly dry the surface until the cloth starts to drag. Attach 1 self-adhesive fastener tab to see if it sticks. (Repeat step 1 to 2 if necessary) A couple of spares have been provided.
3. Attach the self-adhesive fasteners and let them fully adhere over the next 24 hours for the best bond.

*\*The self-adhesive fasteners cannot be used once it has been in contact with silicone. Replacement kits are available from our website.*



## STEP 1. PREPARATIONS

- Remove the load cover. It may be replaced later.

## STEP 2. FITTING THE BASE

- Place the boot liner into the car boot with the Hatchbag logo at the seat end. Flatten the base so it fits snugly against the edges. The hook fasteners welded to the reverse face fix directly to the carpet. **(image A)**
- Place a ref.113 frequent use patch between each hook fastener welded onto the underside of the base, and the carpeted boot floor **(image B)**. This is to help the hook fastener attach to the carpet more securely.



## STEP 3. FITTING THE FRONT

- **- PLUS / SPLIT VERSION ONLY** - fasten the hook & loop fasteners between the side panels and the seat panel. **(image C)**
- Starting with the middle headrest, fasten the hook & loop fastener straps around both headrest posts. **(image D)**. Make sure to hold the front part of the base in position as not to pull the boot liner too far up. Repeat the procedure with the left and right headrests.

### REAR PLUS VERSIONS

- You **MUST** unfasten the hook & loop fasteners + the headrest straps before you recline the rear seat uppers. (*Please refer to REAR PLUS / SPLIT options on website to see detailed photo*)




## STEP 4. FITTING THE SIDES & BACK

- Fasten the hook fastener sewn & welded onto the top edge of the boot liner sides directly onto the carpet along the top edge of the carpeted boot sides. (image E & F)
- You can place some ref.113 frequent use patches between the hook fasteners welded & sewn onto the boot liner, and the carpeted boot sides in places where the fasteners don't fasten well to the carpet (image G).

### Net version only

- The boot liner sits around the net leaving the net exposed and usable. (image F).

- Stick the 340mm long self adhesive loop fastener & 1 self adhesive tab onto the metal panel located on both sides of the lock at the tailgate end of the boot. Fasten the boot liner to it using the hook fastener welded onto it. (Image H)

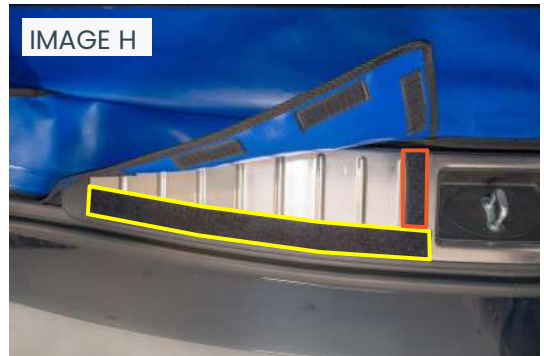

# OPTIONAL EXTRAS

Please note the following photos are non-specific to your vehicle

## STEP 5A. SEAT FLAP

- The Seat flap is designed to protect the top of your rear seat giving additional protection from drooling dogs etc.
- The Seat Flap can also be used in conjunction with the **Rear Plus** or **Split** Option(s). With the rear seats in the folded position the Seat Flap extends the coverage forward. (image 3)
- Lower the headrests
- Attach the Seat Flap to the loop fastener strip that has been manufactured into the Boot liner just below the top of the rear seats. (image 1)
- The flap is then placed over the rear head rests and down the back of the passenger seats. (image 2)
- If the Seat Flap sits over large headrests and obstructs your rear view: carefully create openings in the flap to accommodate the headrest posts.

## STEP 5B. TAILGATE COVER

- Line up the tailgate cover with the tailgate and clean the areas where the self-adhesive loop fastener tabs will be stuck. (image 4)



Use the self-adhesive loop fastener tabs to attach the cover to the plastic trim.

## STEP 5C. BUMPER FLAP

- Fit boot liner
- Attach the Bumper Flap to the loop fastener strip that has been manufactured into the base of the boot liner. (image 5)
- The Bumper Flap either folds into the vehicle OR can be detached and stored elsewhere when you close the tailgate.



## OPTIONAL EXTRAS page 2

Please note the following photos are non-specific to your vehicle

### STEP 5D. FLOOR EXTENSION

The 'Floor extension' offers superior protection to the rear seats when purchased in conjunction with a REAR PLUS option. (image 6 & 7)

- The Floor extension is designed to attach to a Rear Plus/Split version liner.
- It offers additional protection to the back of the front seats and the extended floor area when the rear seats are folded flat.
- It will offer no full protection to the rear doors
- Attach the floor extension to the main boot liner (Image 6)
- Tie the two laces in the corner together (Orange arrows - Image 7)
- Fasten the hook & loop fastener straps around both headrest posts. (Blue arrows—Image 7)

The Seat Flap 5A, The Bumper Flap 5C & The Floor Extension 5D cannot be added at a late date

### STEP 5E. FREQUENT USE KIT

- If you frequently remove/fit your boot liner from/to your vehicle please note that the carpet will "fluff" up – we have an alternative "Frequent Use Fitting Kit" (image 8+9)

The Frequent Use Kit is available to buy from our "on-line" Factory Shop – simply add it to your order from the Factory Shop. These can also be ordered at a later date.

