

UK H0911

Mercedes-Benz GLC

2022 Onwards



Fitting Kit Contents

- Bootliner
 - 2 x 410 / 30

- Tailgate Cover
 - 26 x tabs

"quantity x length / width" in mm



*Please be aware that your bootliner may be different depending on your options/extras selection



Before you fit the bootliner

To ensure the self-adhesive fasteners securely adhere, it's **absolutely essential** to thoroughly **eliminate** any **silicone** residues left from manufacturing and valeting processes.

To achieve this you will need a silicone remover. We recommend **Autoglym® Intensive Tar Remover***


*can be purchased from Halfords / Amazon amongst other retailers.

Preparations

- Ensure your boot floor and seats are set to match your order.
- Remove the load cover. It may be replaced later.
- Slide the seats as far back to the tailgate, if applicable.

1

Fitting key



Where you find this symbol the bootliner's hook fastener will attach directly to the carpet ⁽¹⁾

When this is not suitable, we provide self-adhesive loop fasteners to stick onto plastic/metal trim:



Where you find this symbol, follow these steps:

- 1) Apply *Autoglym® Intensive Tar remover** generously to a cloth and scrub the highlighted surface areas.
- 2) Dry surface thoroughly with a separate cloth until it dries.
- 3) Test the surface by attaching one fastener tab - it should stick well, if not repeat previous steps⁽²⁾



Silicone is used during car manufacturing/valeting, it will interfere with the adhesion.

*can be purchased from Halfords / Amazon amongst other retailers.

Tips:

- ⁽¹⁾ If you frequently remove your boot liner from your vehicle consider our ***Frequent Use Fitting Kit*** to prevent carpet fluffing, available for purchase from our "Accessories" page.
- ⁽²⁾ If temperatures are low, run your car for a little bit so that the boot reaches room temperature or fit your liner once you have been out for a drive.
- For optimal adhesion of the fasteners, do not remove the bootliner for approx. 48 hours.


Notes:

- The adhesive fasteners ***cannot be used once they have been in contact with silicone.*** Replacement Fitting Kits can be purchased from our accessories page.
- Adherence to the instructions will affect the performance of the Fitting Kit. Please note *The Hatchbag Company* will not accept requests for free replacements if the adhesives come loose after use.



Refer to colour code in the first page **Fitting Kit Contents**

2

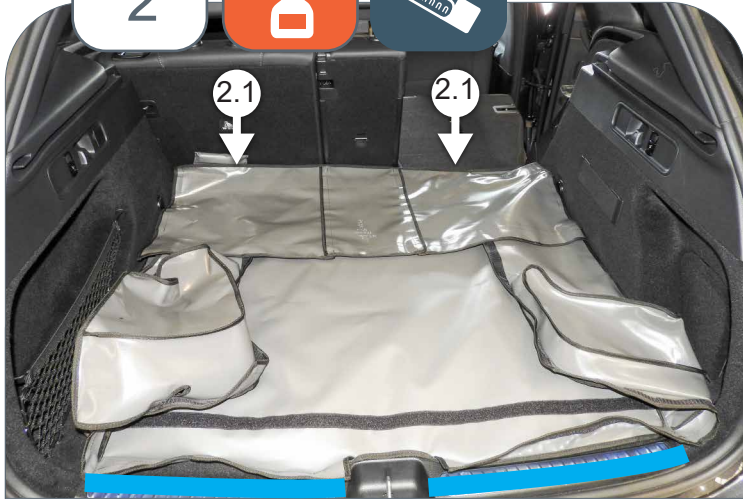

- Fold the rear seats in preparation for next step.
- Insert the tabs into the void between seat & base (2.1)
- Ensure the base is aligned to fit the boot edges.

Tips:

- Snip the self adhesives to ease around the curves

3



- Fasten the headrest straps without pulling the base off the floor.



If you want to fold the rear seats later, you **MUST** unfasten the headrest straps first!

4



*Please be aware that your boot liner may be different depending on your options/extras selection

Tips:

- Commence fitting from the tailgate end.
- For Rear Plus versions, fasten the side to the front panel from bottom to top

Optional extras

Note: not all the photos are specific to your vehicle

Bumper Flap

-Attach the Bumper Flap to the loop fastener strip located on the base of the boot liner.



Tailored Rear Seat Flap

-Lower the headrests.

-Attach the Seat Flap to the loop fastener strip located just below the headrest straps.

-Use additional flaps when folding seats.




Tailgate Cover



-Line up the tailgate cover with the tailgate and clean the areas where the self-adhesive loop fastener tabs will be stuck.

-Begin with the central top and bottom fastener.

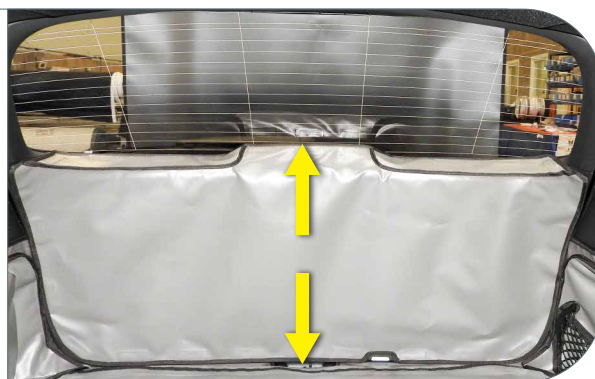

Bootliner Extension

1. Attach the Bootliner Extension to the main boot liner.
2. Fasten the hook & loop fastener straps around the headrest posts.
3. Fasten the two ties in the corner together.
4. Fasten ties to the corresponding rear seat striker loop.

