

UK H0916

# Smart #1

## 2023 Onwards



### Fitting Kit Contents

- Bootliner**
- |                                       |                                       |
|---------------------------------------|---------------------------------------|
| <input type="checkbox"/> 2 x 380 / 30 | <input type="checkbox"/> 2 x 130 / 20 |
| <input type="checkbox"/> 2 x 420 / 30 | <input type="checkbox"/> 2 x 70 / 30  |
| <input type="checkbox"/> 2 x 100 / 30 |                                       |
- Tailgate Cover**
- 20 x tabs
- Bootliner Extension**
- 2 x tabs

"quantity x length / width" in mm



\*Please be aware that your bootliner may be different depending on your options/extras selection



### Before you fit the bootliner

To ensure the self-adhesive fasteners securely adhere, it's **absolutely essential** to thoroughly **eliminate** any **silicone** residues left from manufacturing and valeting processes.

To achieve this you will need a silicone remover. We recommend **Autoglym® Intensive Tar Remover\***

\*can be purchased from Halfords / Amazon amongst other retailers.

### Preparations

- Ensure your boot floor and seats are set to match your order.
- Remove the load cover. It may be replaced later.
- Slide the seats as far back to the tailgate, if applicable.

1

Fitting key



Where you find this symbol the bootliner's hook fastener will attach directly to the carpet <sup>(1)</sup>

When this is not suitable, we provide self-adhesive loop fasteners to stick onto plastic/metal trim:



Where you find this symbol, follow these steps:

- 1) Apply *Autoglym® Intensive Tar remover*\* generously to a cloth and scrub the highlighted surface areas.
- 2) Dry surface thoroughly with a separate cloth until it dries.
- 3) Test the surface by attaching one fastener tab - it should stick well, if not repeat previous steps<sup>(2)</sup>



Silicone is used during car manufacturing/valeting, it will interfere with the adhesion.

\*can be purchased from Halfords / Amazon amongst other retailers.

Tips:


- <sup>(1)</sup> If you frequently remove your boot liner from your vehicle consider our ***Frequent Use Fitting Kit*** to prevent carpet fluffing, available for purchase from our "Accessories" page.
- <sup>(2)</sup> If temperatures are low, run your car for a little bit so that the boot reaches room temperature or fit your liner once you have been out for a drive.
- For optimal adhesion of the fasteners, do not remove the bootliner for approx. 48 hours.

Notes:

- The adhesive fasteners ***cannot be used once they have been in contact with silicone.*** Replacement Fitting Kits can be purchased from our accessories page.
- Adherence to the instructions will affect the performance of the Fitting Kit. Please note *The Hatchbag Company* will not accept requests for free replacements if the adhesives come loose after use.



Refer to colour code in the first page **Fitting Kit Contents**

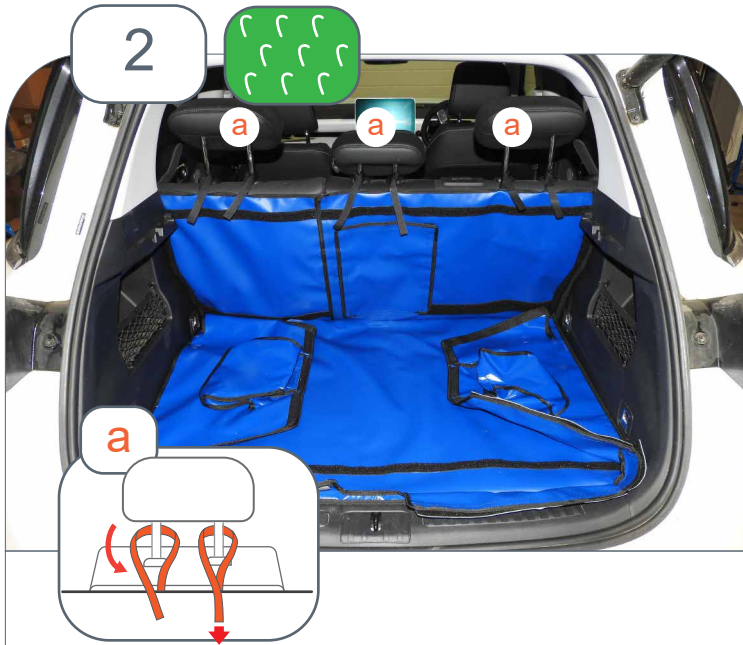

- Ensure the base is aligned to fit the boot edges.
- Fasten the headrest straps without pulling the base off the floor.



If you want to fold the rear seats later, you **MUST** unfasten the headrest straps first!



Tips:

- Snip the self adhesives to ease around the curves



\*Please be aware that your boot liner may be different depending on your options/extras selection

Tips:

- Commence fitting from the tailgate end.
- For Rear Plus versions, fasten the side to the front panel from bottom to top

# Optional extras

Note: not all the photos are specific to your vehicle

## Bumper Flap

-Attach the Bumper Flap to the loop fastener strip located on the base of the boot liner.



## Tailored Rear Seat Flap

-Lower the headrests.

-Attach the Seat Flap to the loop fastener strip located just below the headrest straps.

-Use additional flaps when folding seats.




## Tailgate Cover



-Line up the tailgate cover with the tailgate and clean the areas where the self-adhesive loop fastener tabs will be stuck.

-Begin with the central top and bottom fastener.

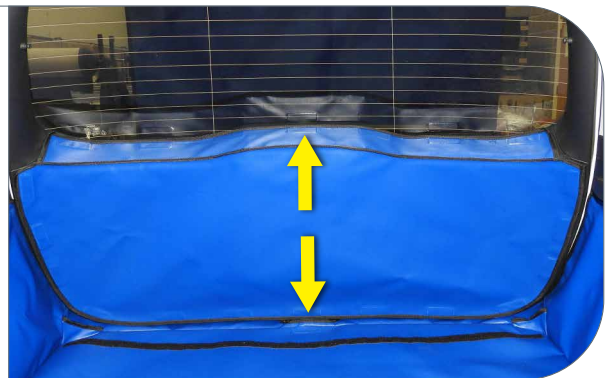

## Bootliner Extension

1. Attach the Bootliner Extension to the main boot liner.
2. Fasten the hook & loop fastener straps around the headrest posts.
3. Fasten the two ties in the corner together.
4. Fasten ties to the corresponding rear seat striker loop.

